


ÆFFECT

DROPPER POST

QUICK START GUIDE

IN THE BOX

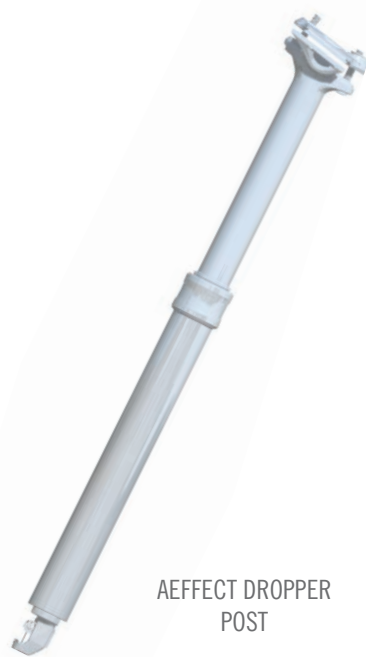

AEEFFECT DROPPER
POST



CABLE HOUSING



SHIFT CABLE



AEEFFECT 1X LEVER



CABLE BARREL NUT

TOOLS REQUIRED




2mm HEX


3mm HEX

4mm HEX

5mm HEX

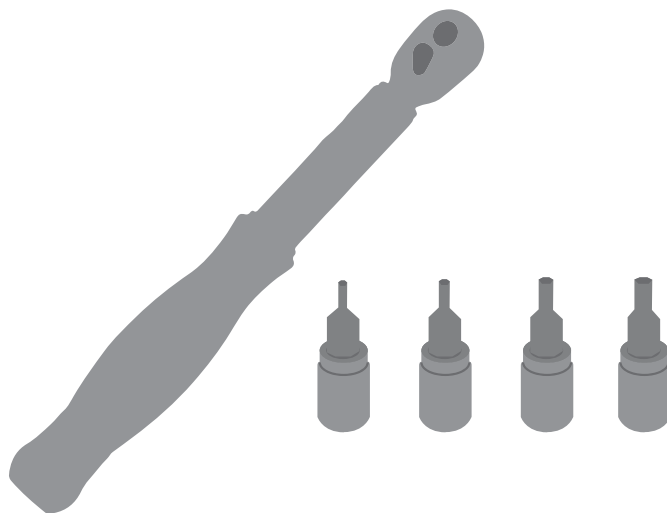

TORQUE WRENCH WITH 2, 3, 4 & 5mm ALLEN KEY BITS








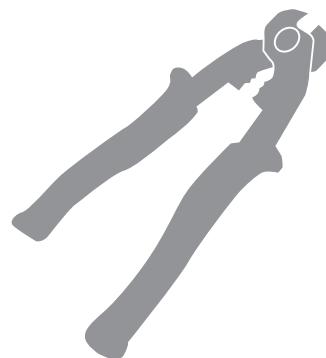


CABLE CUTTER



TAPE

DRYFIT CABLE HOUSING LENGTH

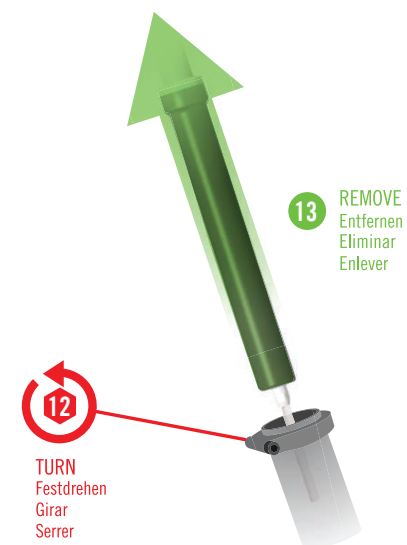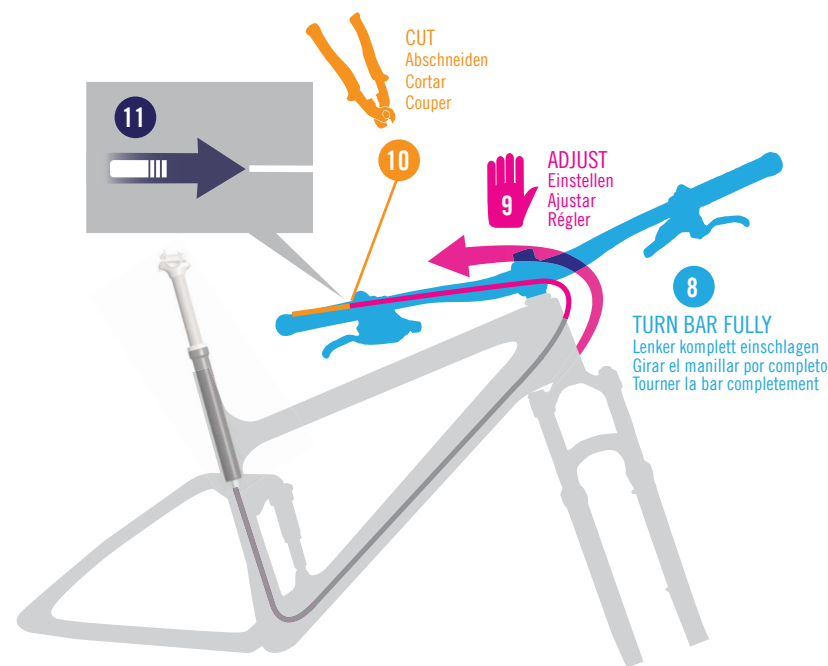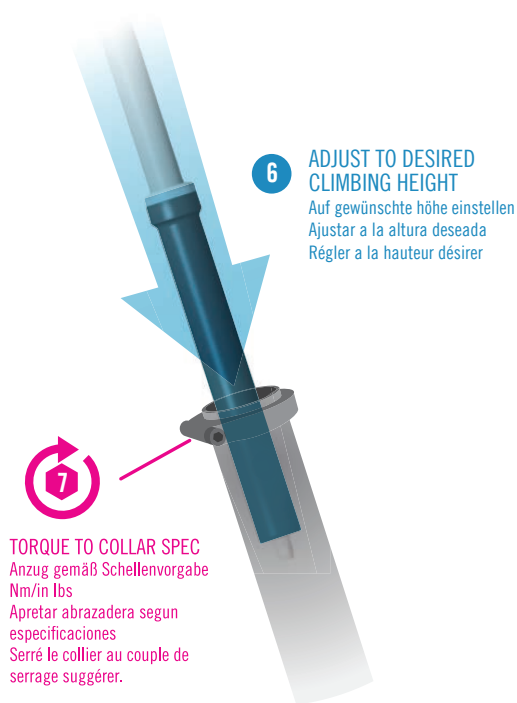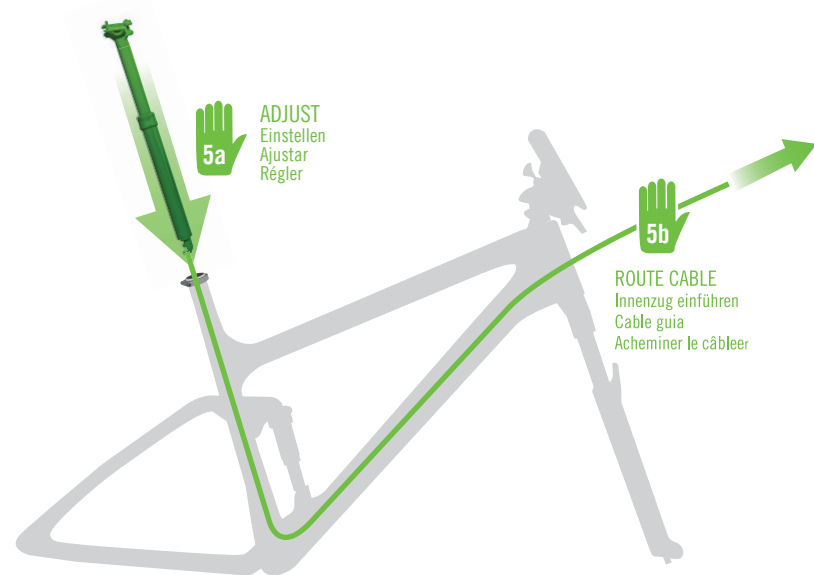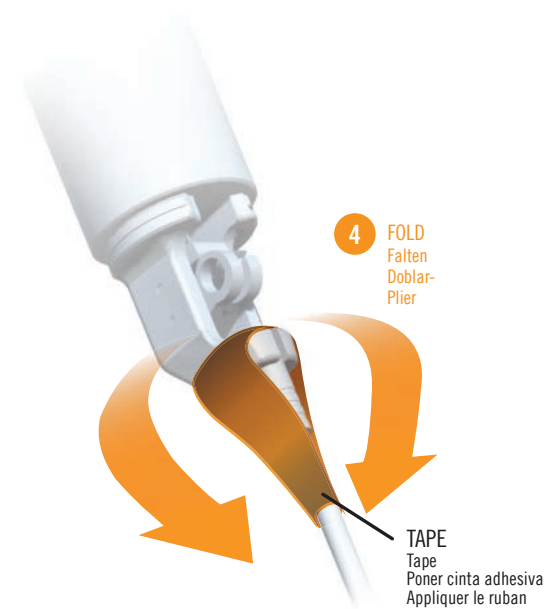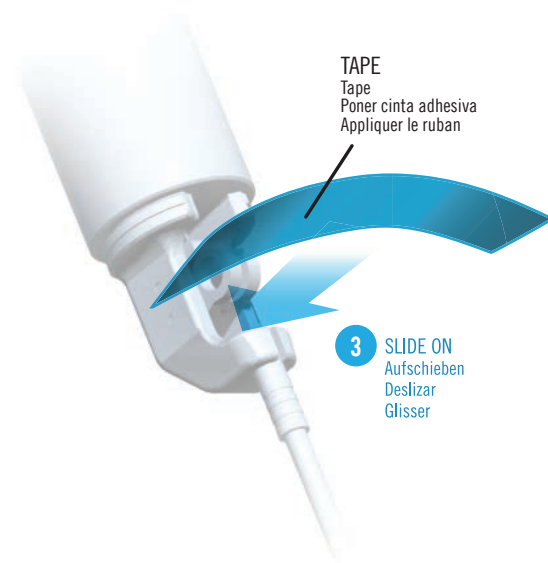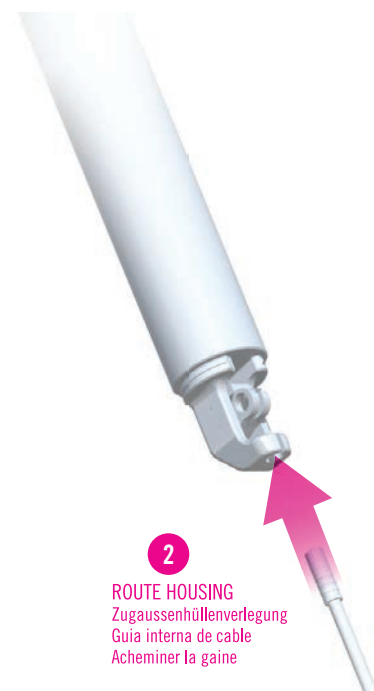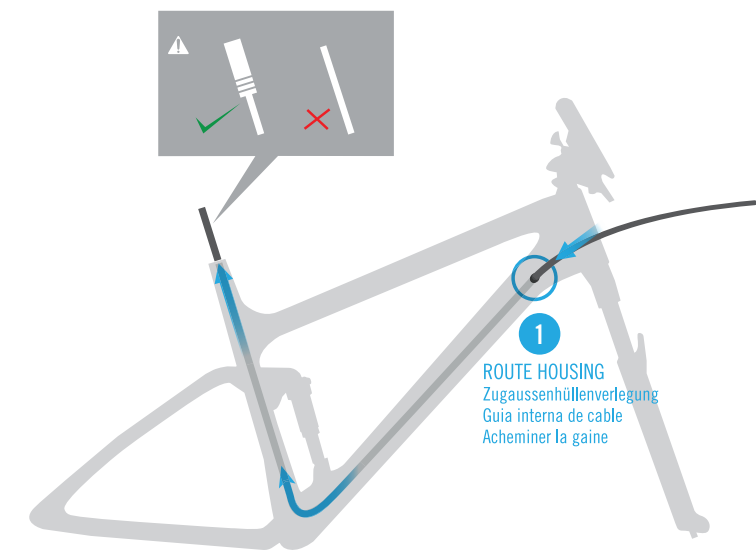

POST INSTALLATION

